

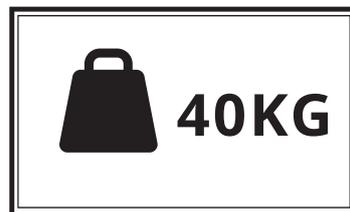
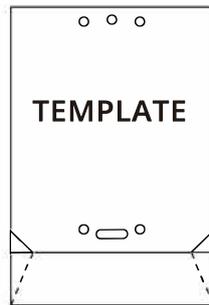
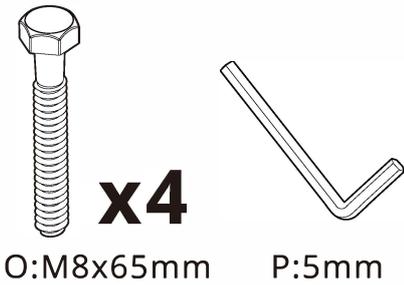
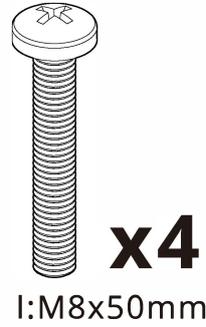
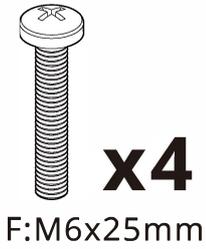
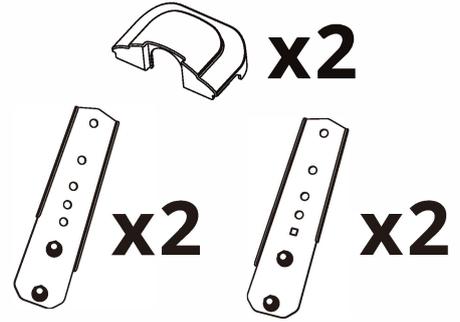


CFM4A

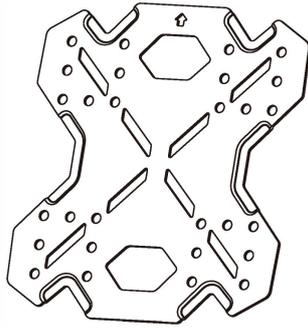

梱包に含まれるもの



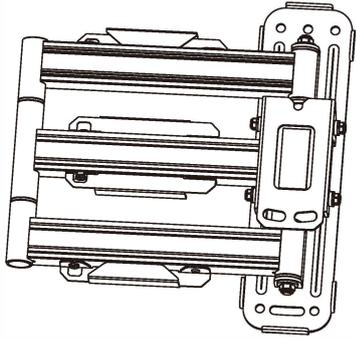


◀テンプレート


組み立てに必要な工具

木製の壁用

コンクリートの壁用

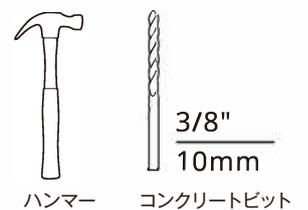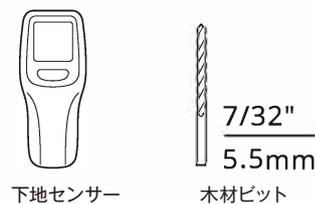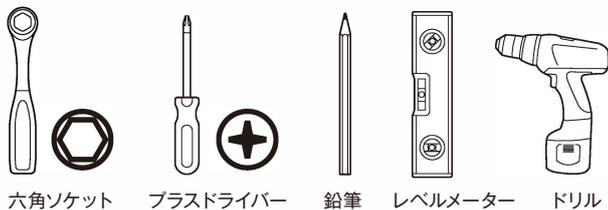

1.壁面取付け用アセンブリからTV固定ブラケットを取り外します

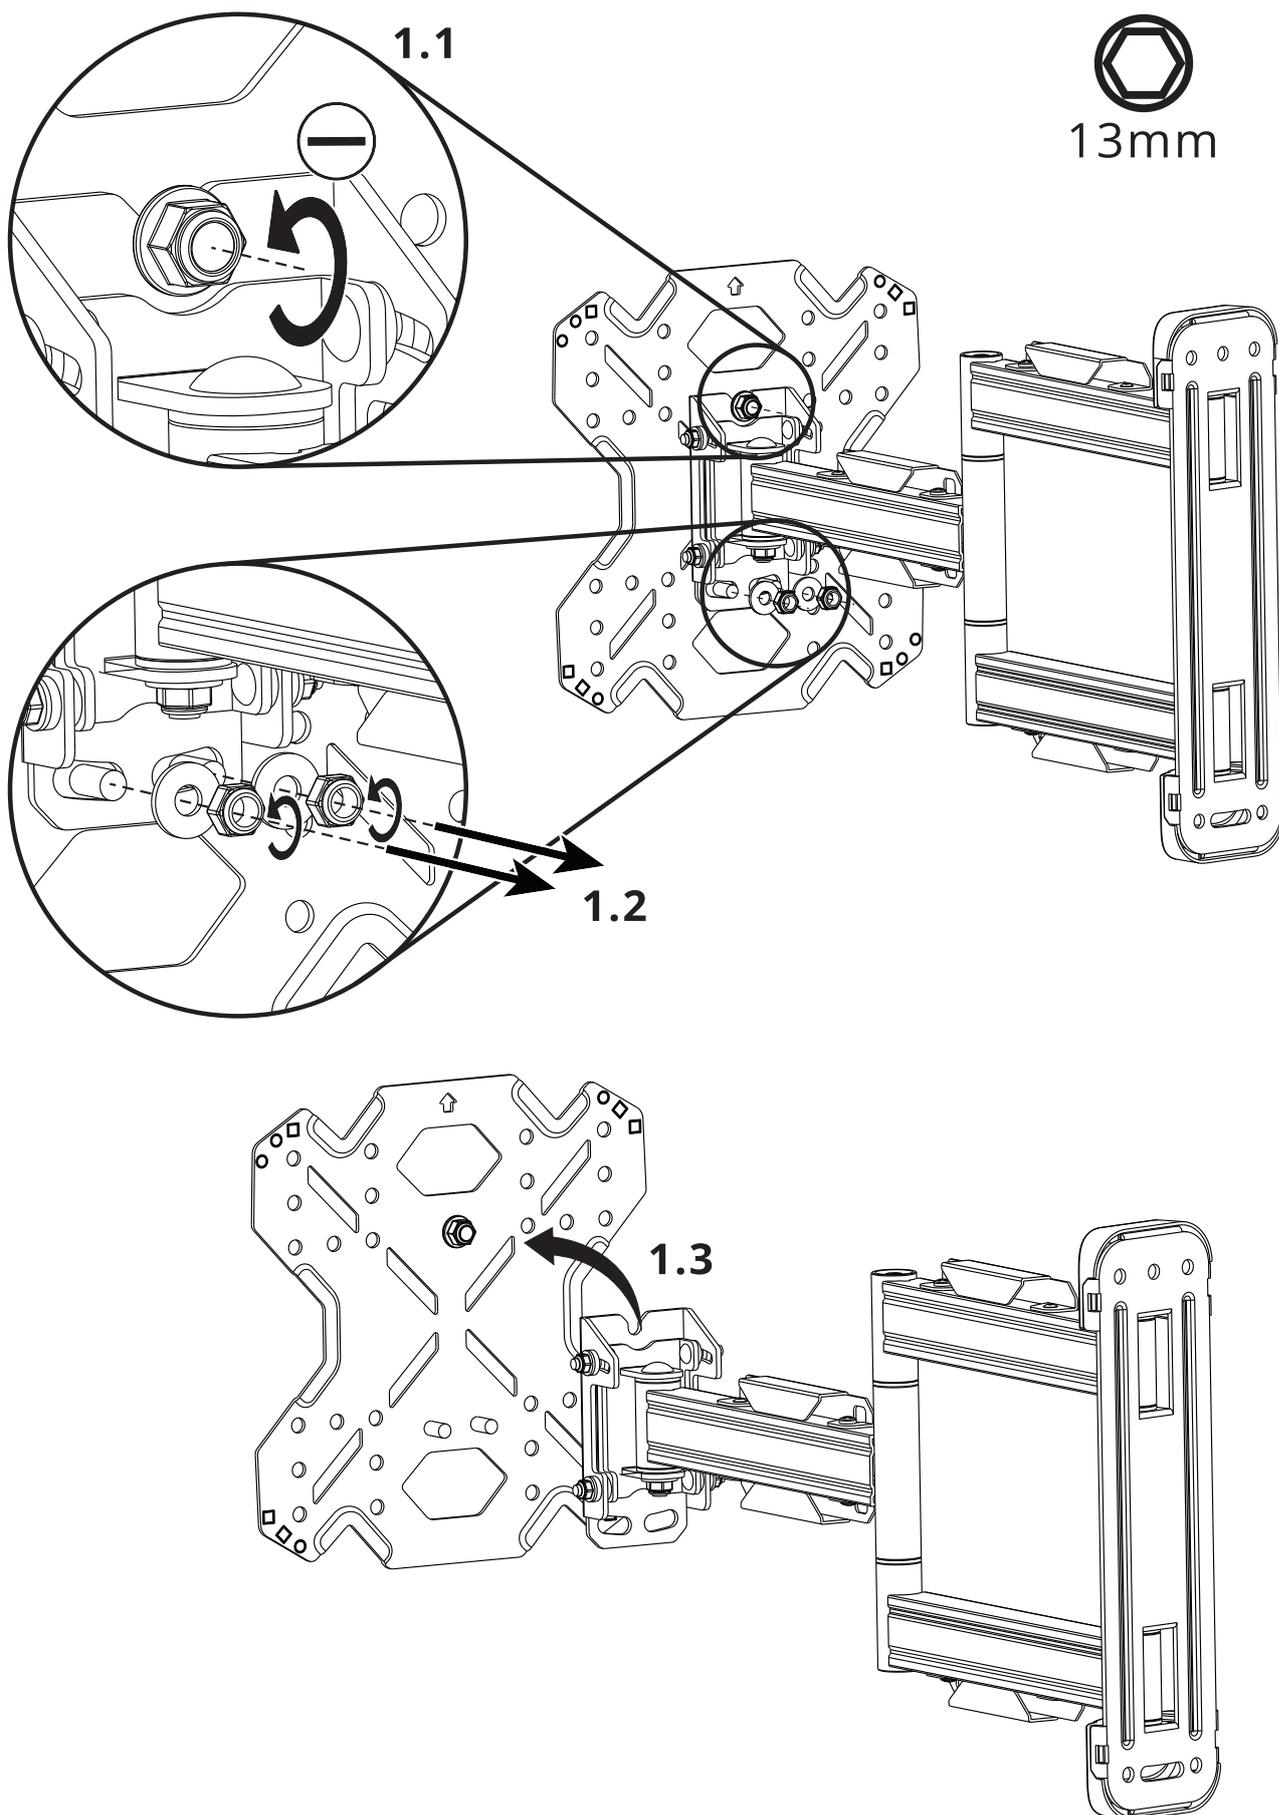

2.TVにTV固定ブラケットを取り付けます

VESA

100 x 100 150 x 150
 100 x 150 200 x 100
 100 x 200 200 x 150
 150 x 100 200 x 200




2a.

VESA

200 x 250 300 x 300
 200 x 300 400 x 200
 200 x 400 400 x 300
 300 x 200 400 x 400

2b.
Pg.5



2a.

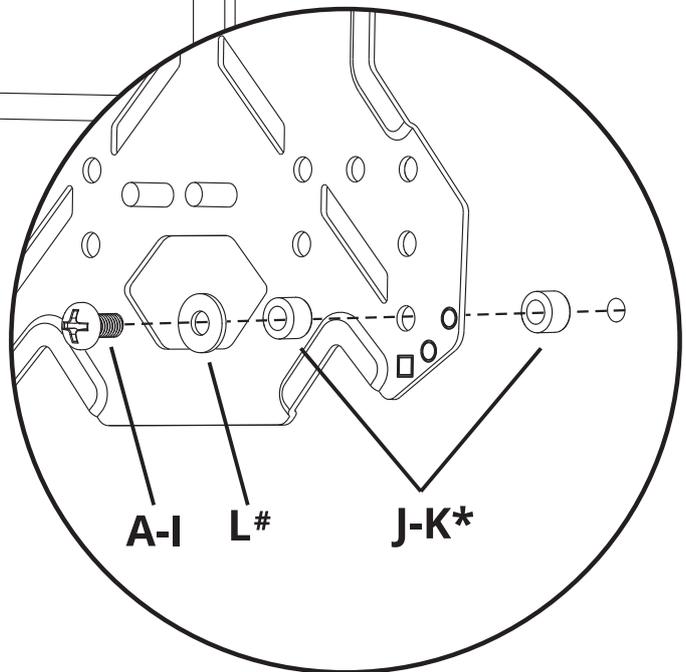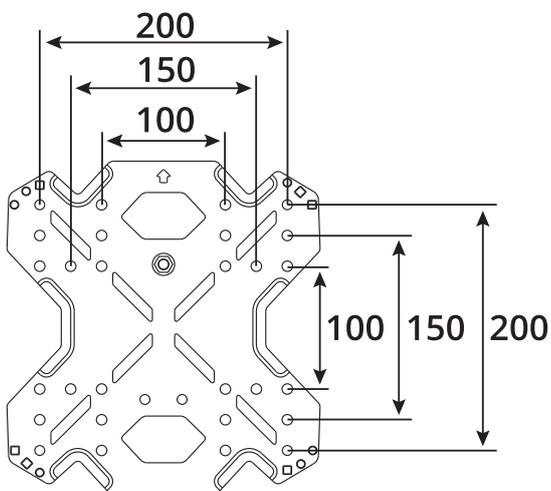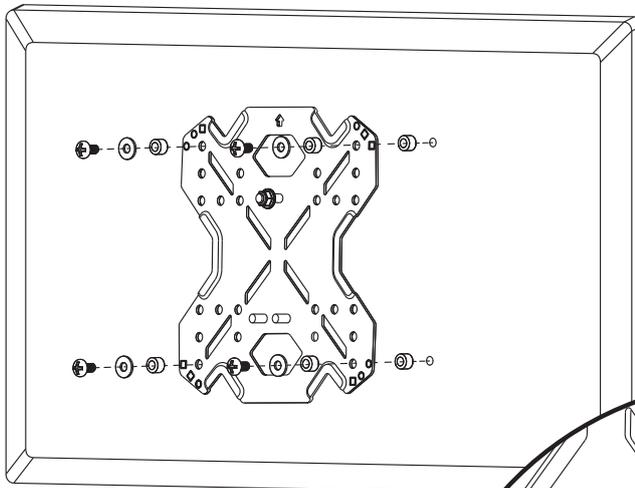

#ワッシャはM4/M5/M6ネジのときのみ使用

*オプション


2b.

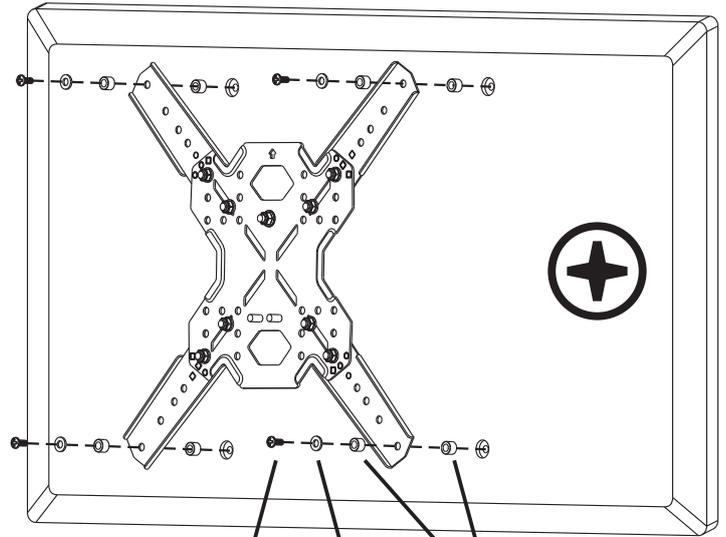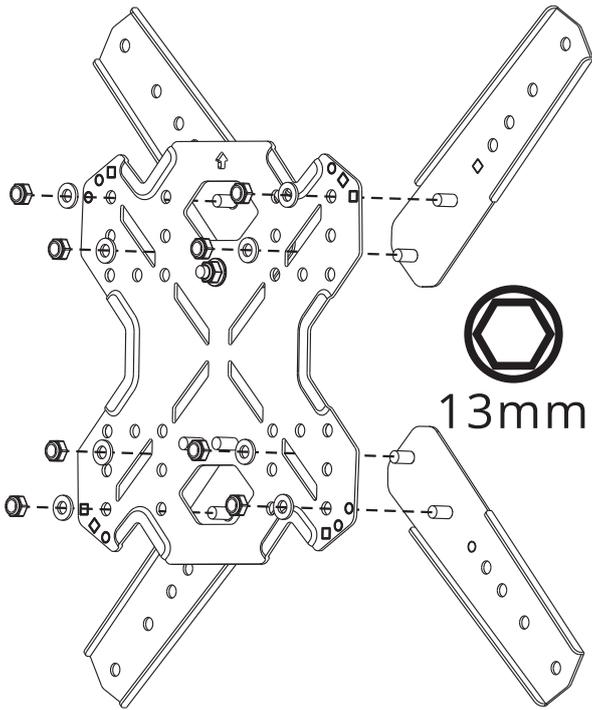


A-I L# J-K*

#ワッシャはM4/M5/M6ネジのときのみ使用
*オプション


VESA: 400x400, 300x300

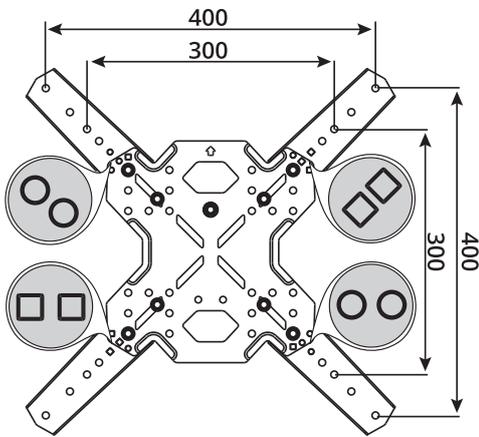


VESA: 200x250, 200x300

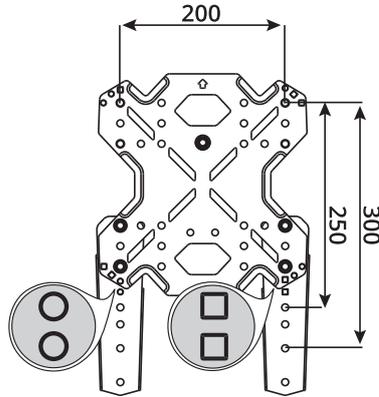


VESA: 200x300, 200x400

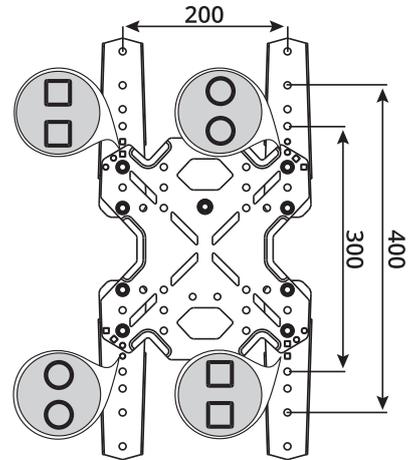



VESA: 400x200, 300x200

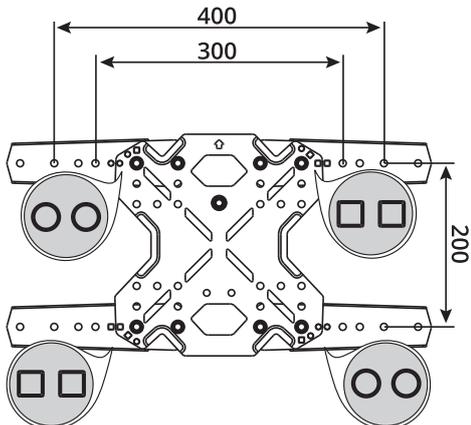



VESA: 400x300

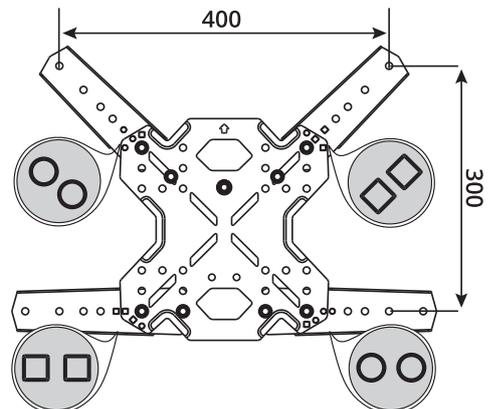


3a.壁面取り付け用部品を取り付けます (木製壁)

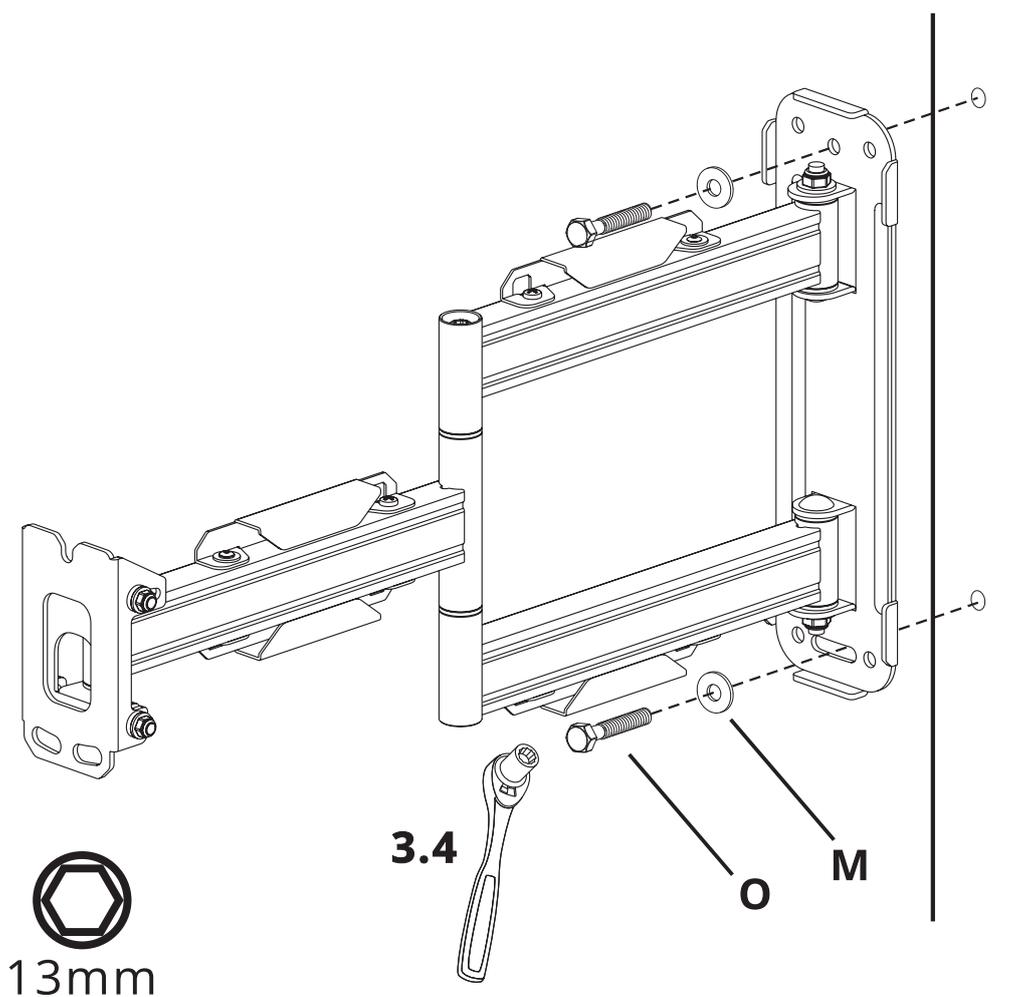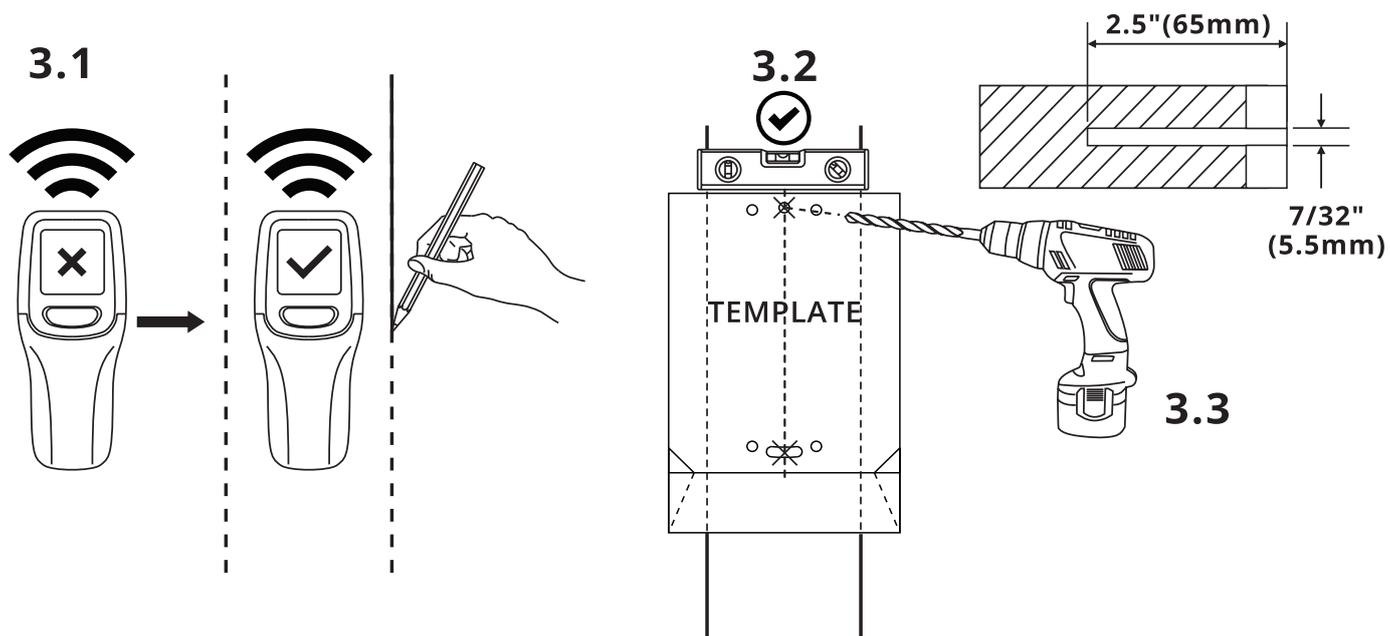




3b.壁面取り付け用部品を取り付けます (コンクリート壁)

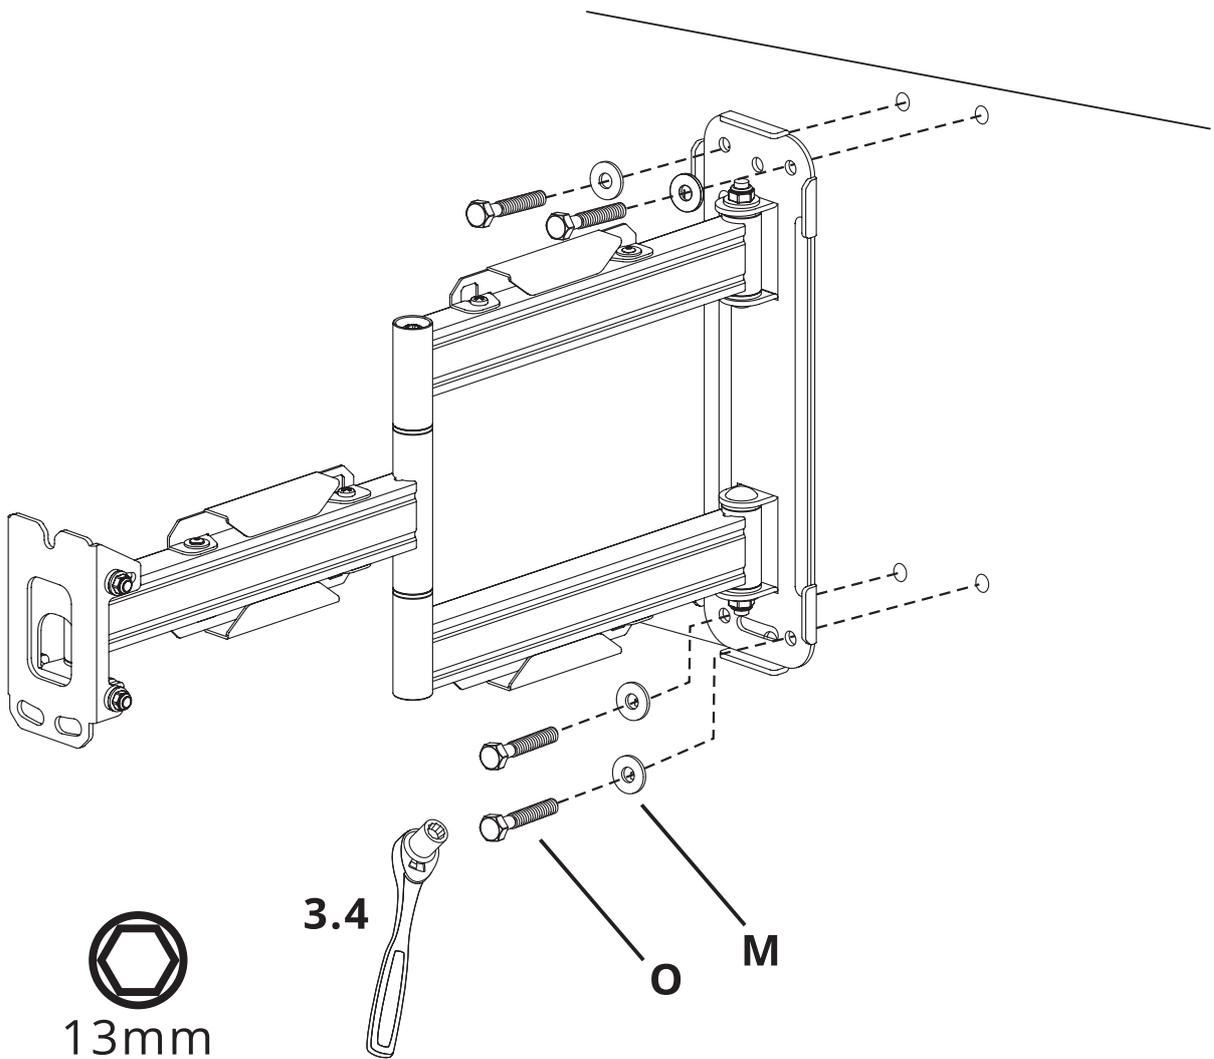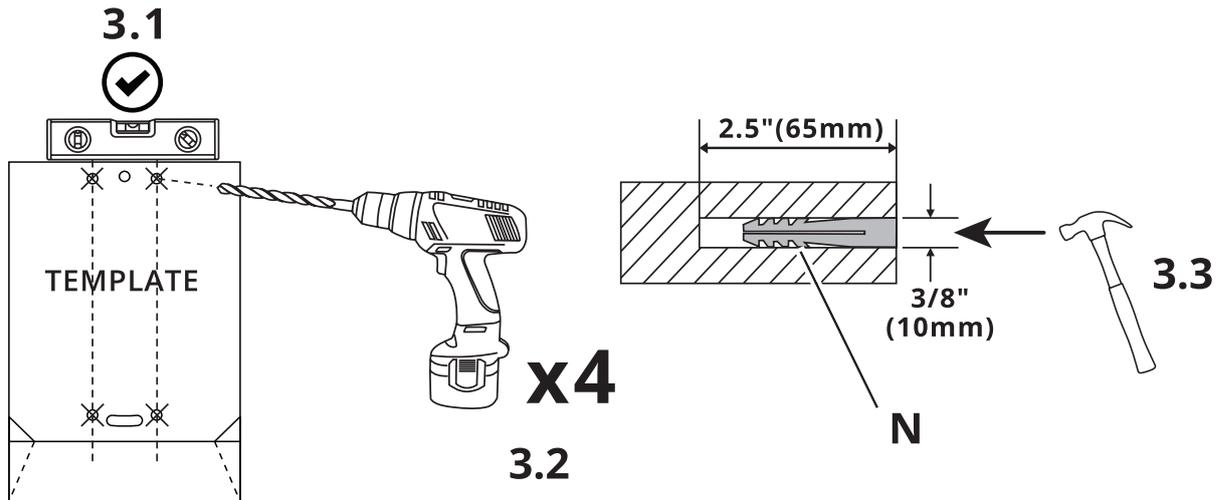



4.平面プレートカバーを取り付けます

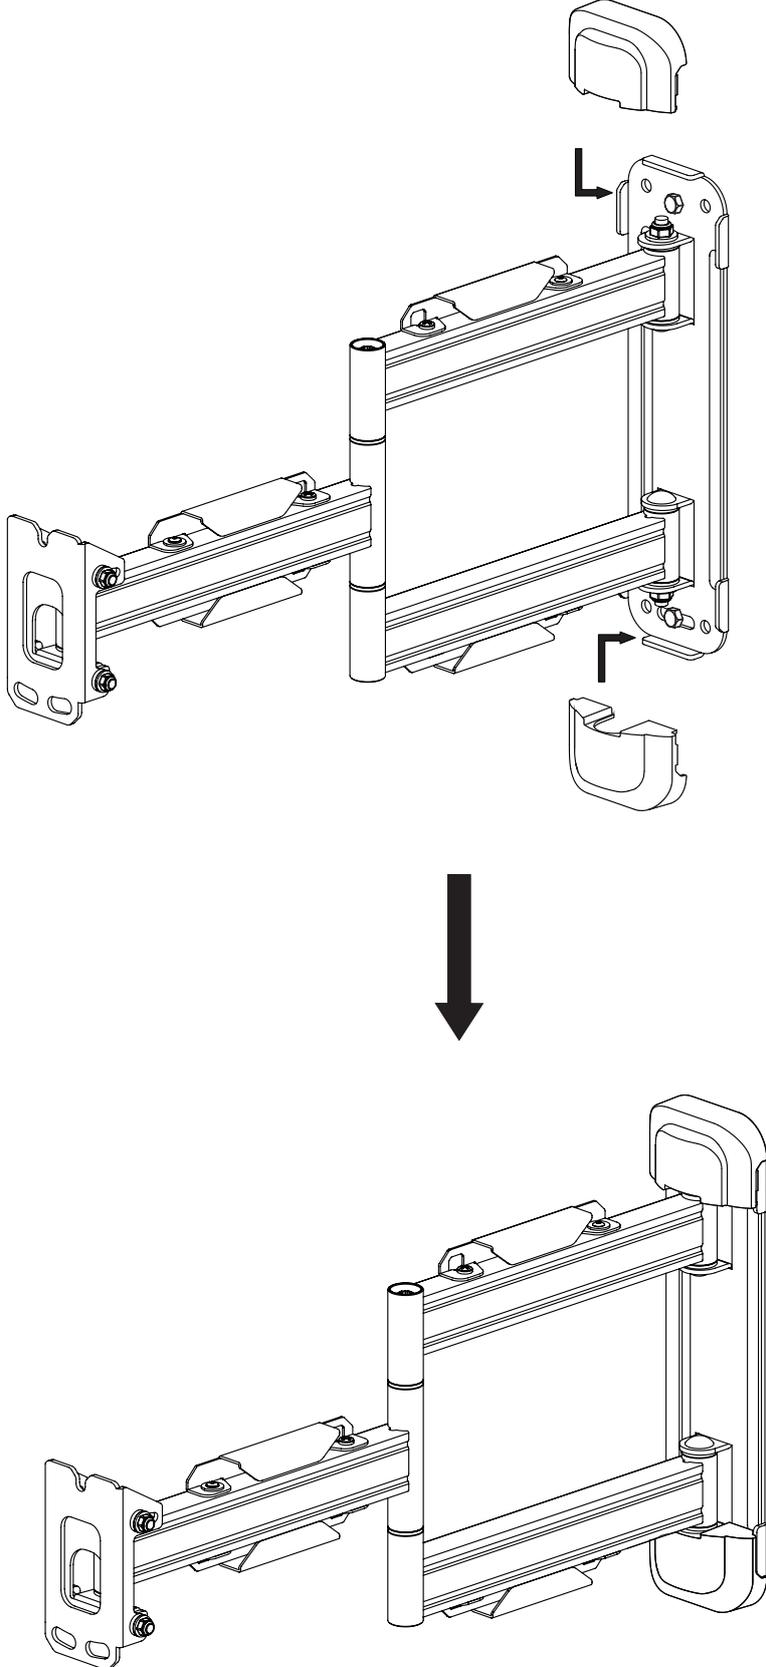

5.TVモニターを取り付けます

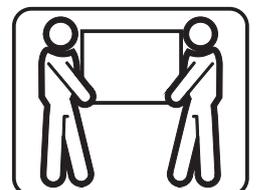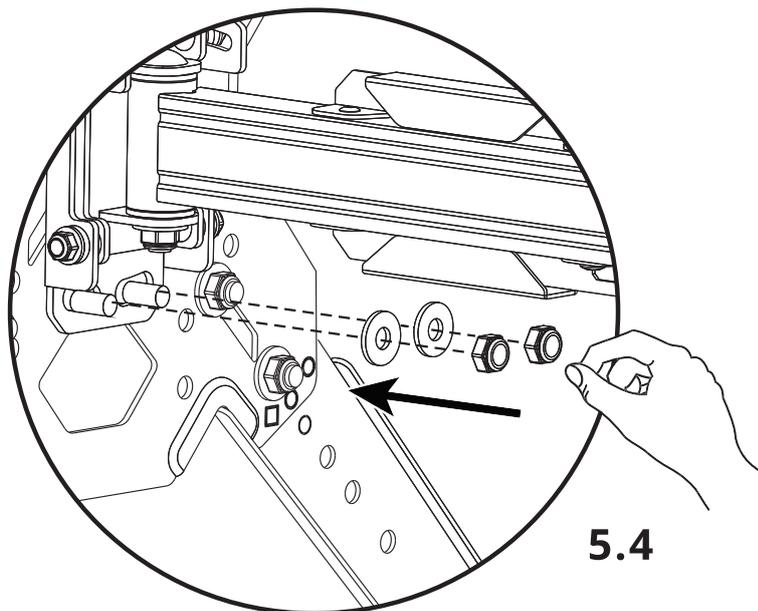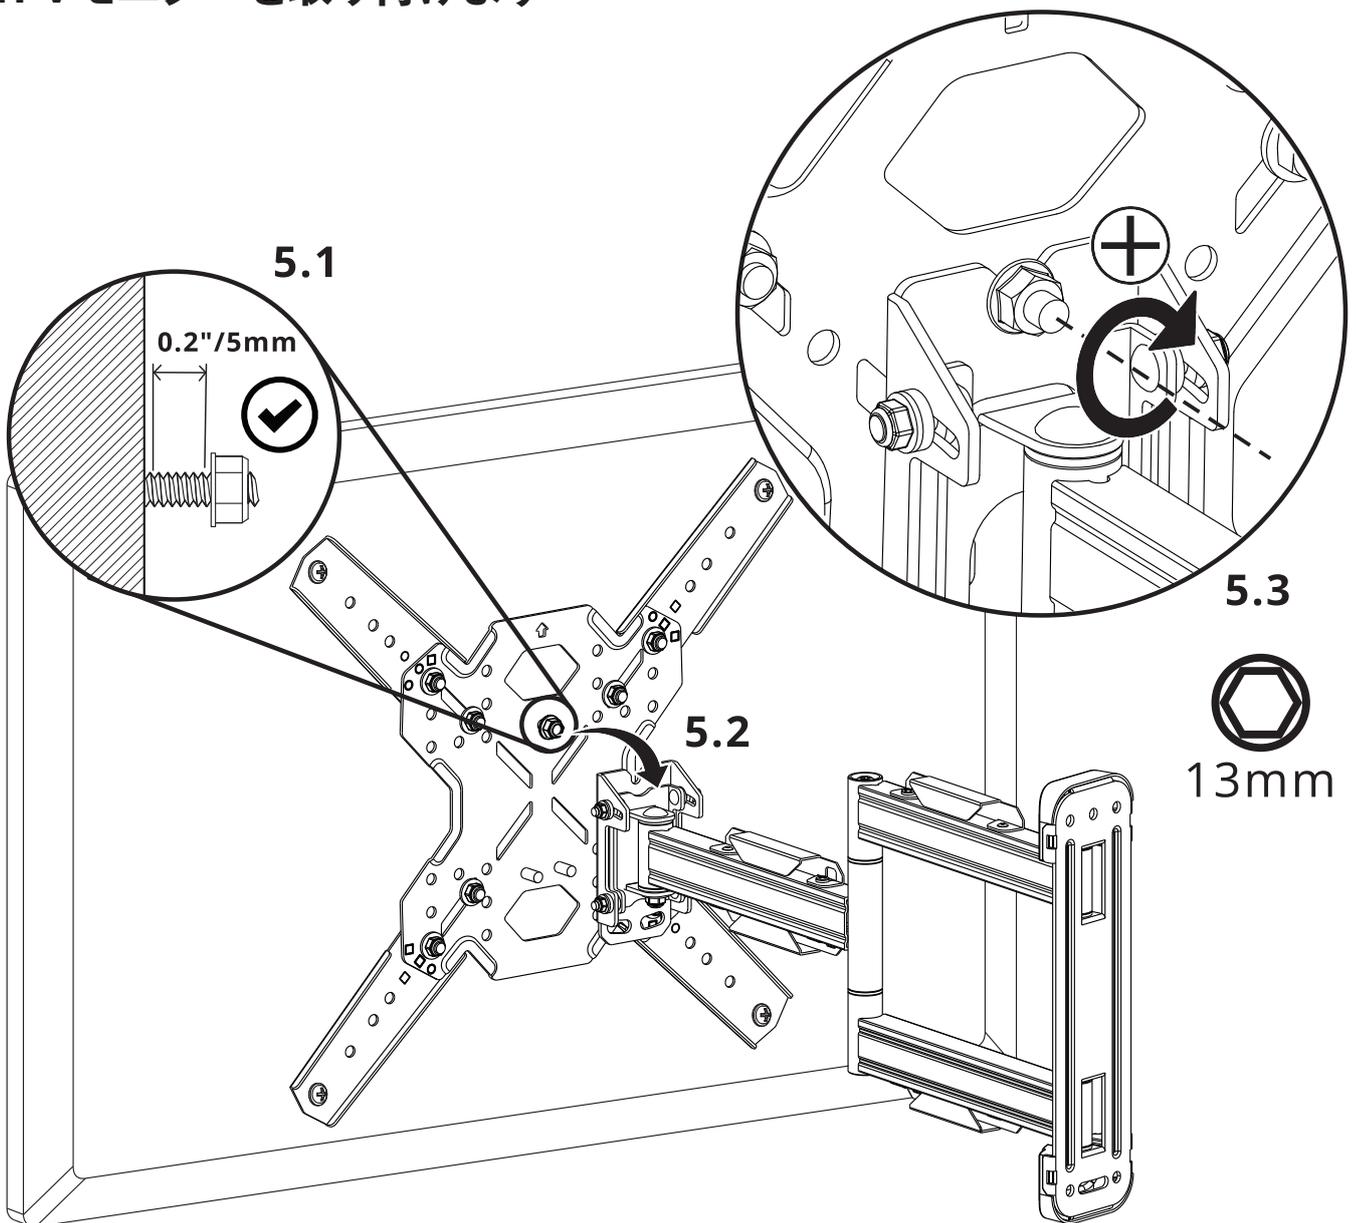


6.TVの傾きを調整します

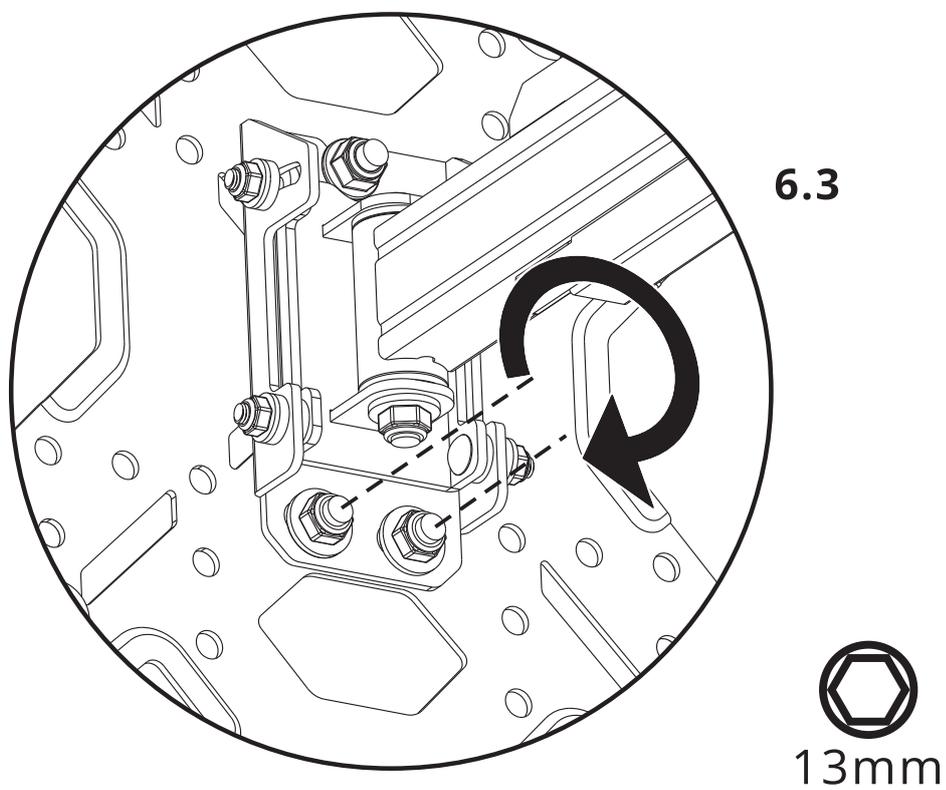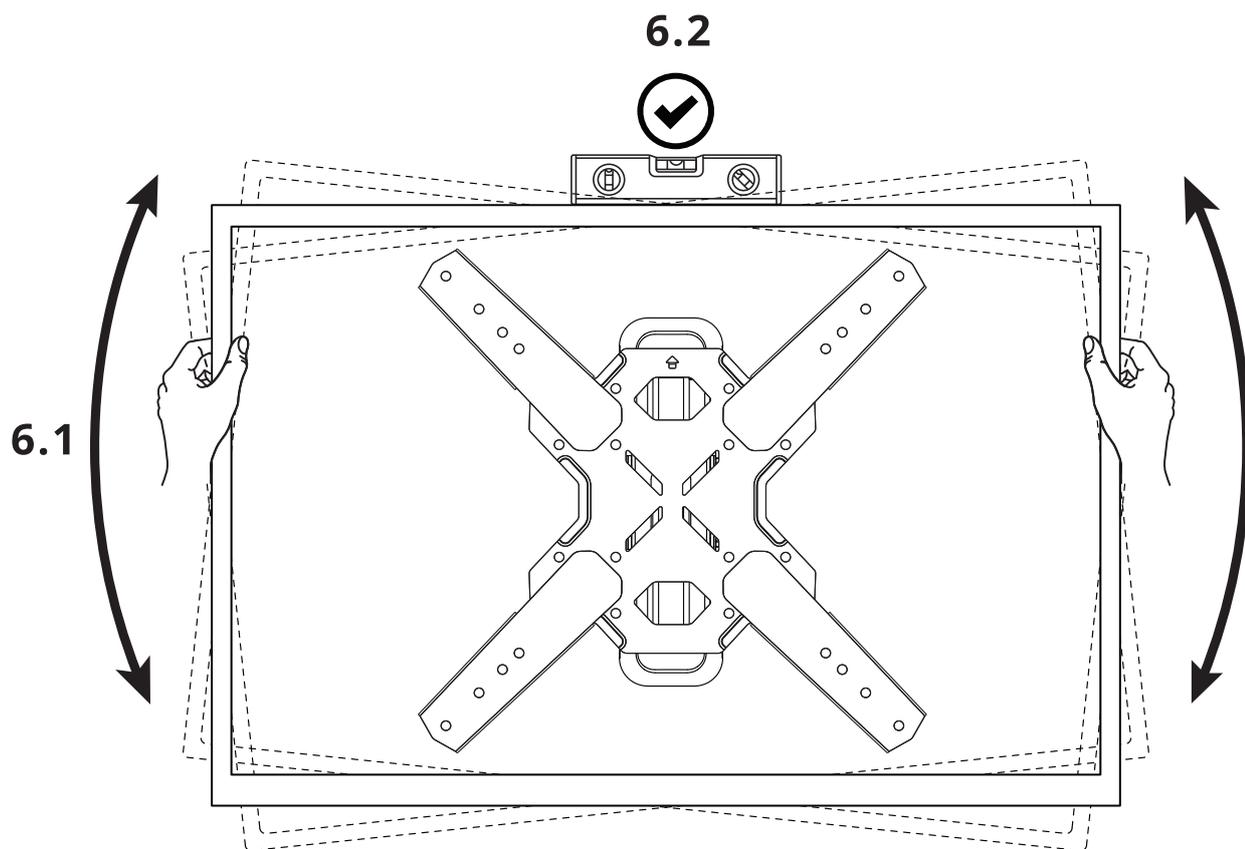


7.最終調整


7.1

*必要に応じてアームの硬さを調整します

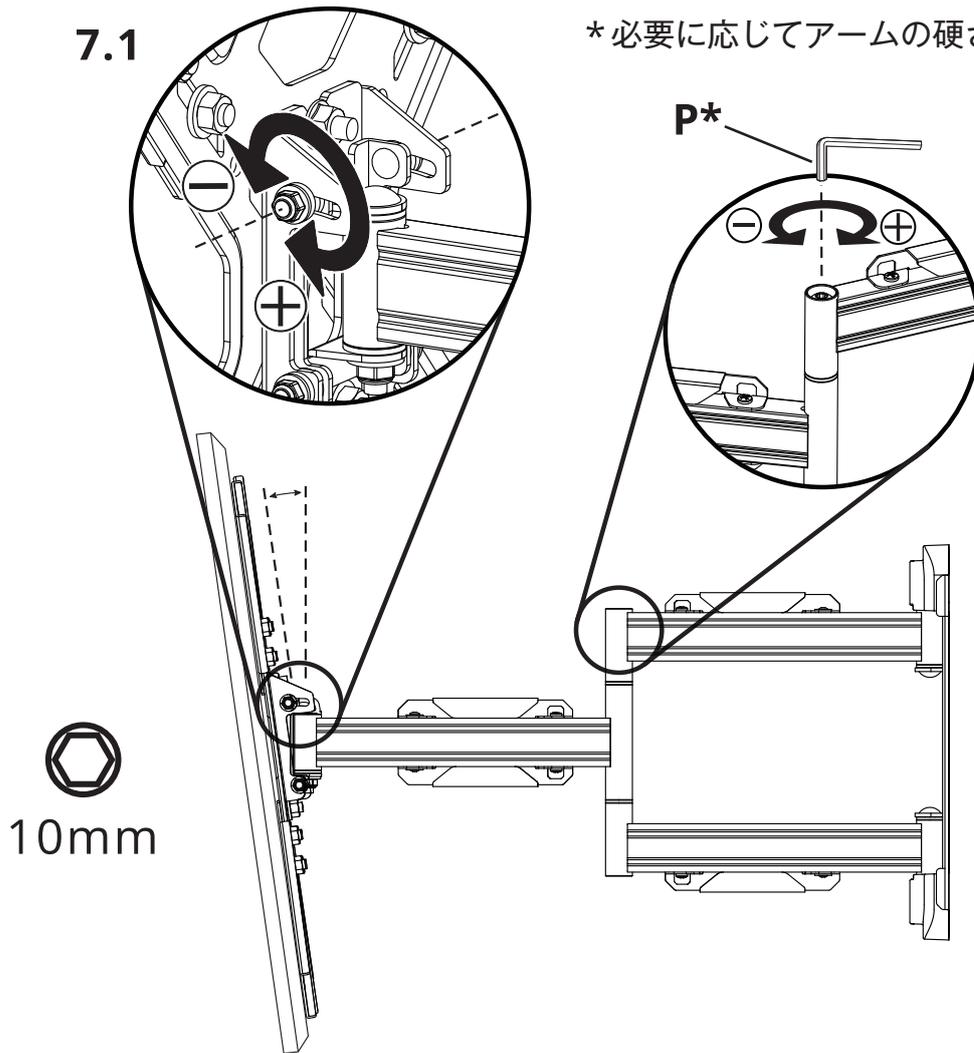

8.ケーブルを固定します

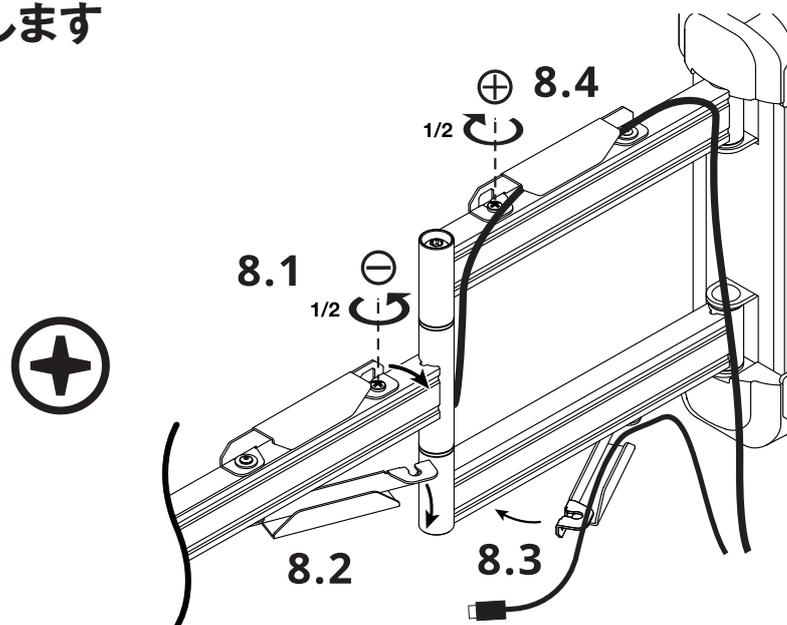

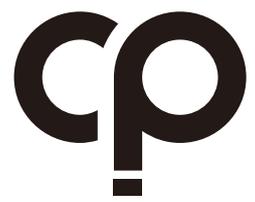

Classic Pro