

PLAYTECH

FOLDABLE KEYBOARD

PFK61

取扱説明書 Ver. 1.0



安全上の注意

1. 本マニュアルに記載されている全ての警告と指示に従ってください。
2. 本マニュアルはいつでも使用できるように、安全な場所に保管してください。
3. 本体を水の近くで使用しないでください。
4. 本体を水または液体の中にいれないでください。
5. 本体に直接エアゾールスプレー、クリーナー、消毒剤や殺虫剤を使用しないでください。
6. 本体の通気口をふさがないように、マニュアルの指示に従って設置してください。
7. 熱源（ラジエーター、ストーブ、他のアンプ）などの近くに設置しないでください。
8. ホコリの多い場所や直射日光が当たる場所に設置しないでください。
9. 強い振動やショックを与えないでください。
10. ノイズが発生したり誤動作の原因となるため、強い電磁場に近づけないでください。
11. 電磁波干渉によりTVやラジオなどの受信に影響を及ぼす可能性があります。十分な距離を置いて設置してください。
12. 安全のため、必ず付属のDCアダプターをご使用ください。
13. DCアダプターの電源コードは踏まれたり、挟まれる事の無いようにしてください。
14. DCアダプターの電源コードを抜く際は、コードを引っ張らず、プラグ部分を持って引き抜くようにしてください。
15. 製品受領時に外部に損傷（電源ケーブル等を含む）が無いか確認してください。もし製品に損傷があった場合、ただちに販売店へ連絡してください。そのまま使用を続けた場合は、保証期間内でも保証外の対応となる場合があります。
16. アクセサリーやパーツは、指定のものをご使用ください。
17. 他の楽器やデバイスを接続するときは本製品を含む全ての電源をOffにして行ってください。
18. 長期間使用しない場合や落雷の恐れがあるときにはプラグを抜いてください。
19. クリーニングには柔らかく乾いた布を使用してください。
20. 電源周りのトラブルや液体をこぼしてしまった時、異物が入ってしまったとき、高い湿度にさらされた時は、販売店に相談してください。そのまま使用を続けたり、無理に自分で修理を試みないでください。
21. 地域の法律に従ってご使用ください。
22. 設置について疑問が生じた場合は、販売店に相談してください。

充電

電源にはUSB TYPE-C充電器、または電源アダプターが使用できます。

- USB TYPE-C充電器

PD急速充電には対応していません。

- 電源アダプター


DC 5V/2A

画面のすぐ下にあるランプは充電表示ランプです。


充電中: 赤色、フル充電: 緑色

バッテリー充電時間: 5時間程度

使用前に必ず充電してください。初回は6時間以上充電してください。

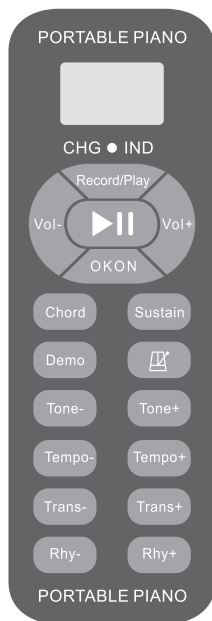

接続パネル

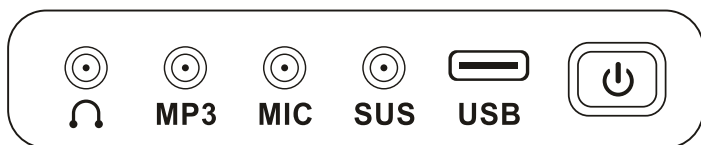

ヘッドホン/外部スピーカー用出力端子

MP3プレーヤー用入力端子

マイク用入力端子

サステインペダル用入力端子

TYPE-C充電/MIDIインターフェース用端子

操作パネル(1/3)

ボリューム

Vol-**②**またはVol+**③**を押して音量を調整します。

スタート/ストップ**④**


押すとリズムがスタートします。もう一度押すとリズムが停止します。

録音/再生

1. Record/Playボタン**①**を長押しすると、録音スタンバイ状態になります。演奏し始めると録音が始まります。
2. Record/Playボタン**①**を短く押すと、最後に録音した曲が再生されます。

レッスンモード

1. OKONボタン**⑤**を押すとレッスンモードに入ります。レッスンモードでは、内蔵ソングの右手(メロディー)部分を練習できます。OKONボタン**⑤**を押すごとに、練習A→練習B→ オフの順にモードが切り替わります。
2. 練習A: デモソングの伴奏部分のみが流れるので、メロディーを弾いてみましょう。どの鍵盤を押しても正しい音が鳴ります。伴奏は止まりません。
3. 練習B: デモソングの伴奏部分のみが流れます。メロディー通りの正しい鍵盤を押した時だけ音が鳴ります。伴奏は止まりません。
4. デモソングの選択: Demoボタン**⑧**押して、デモソングを選択します。

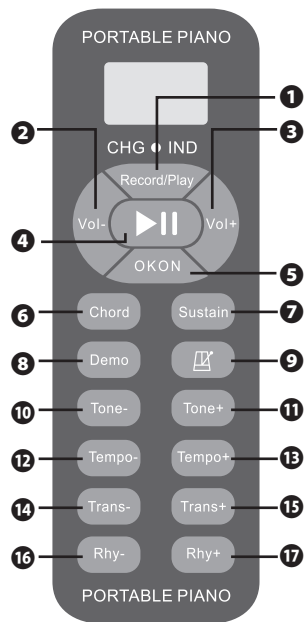

操作パネル(2/3)

ペロシティ設定

OKONボタン⑤を長押しするとペロシティ設定に入り、もう一度長押しすると設定が切り替わります。初期設定はペロシティONです。OFFにすると音の強弱が付かなくなります。

コードモード(自動伴奏)

1. Chordボタン⑥を押すと、SINGLE→FINGERS→OFFの順にコードモードが切り替わります。
2. SINGLEまたはFINGERSを選択するとコード演奏モードとなり、リズムを再生中に低音域C3～F4#のキーを押すと、リズムに合った伴奏が流れます。

SINGLE: 指1本で伴奏を奏でられるモードです。

FINGERS: 3個以上の音を押して和音を弾くと伴奏が流れます。

サステイン


Sustainボタン⑦を押すとサステインがONになり、もう一度押すとOFFになります。サステインをONにすると、ペダルを踏んでいるときのように音が一定の間伸びます。

デモソング

1. Demoボタン⑧を押すと、デモが再生されます。もう一度Demoボタン⑧を押すと、次の曲に進みます。
2. Demoボタンを長押しすると素早くデモを選択することができます。
3. ▶|| を押して、デモを停止します。

メトロノーム

- ⑨ボタンを押すと、メトロノームが鳴り始めます。メトロノームボタン⑨を押すごとに拍子が変わります(1/4、2/4、3/4、4/4)。

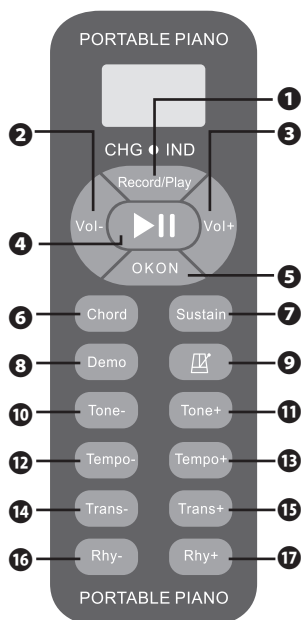

操作パネル(3/3)

音色

1. Tone-**10**またはTone+**11**を押して、000～127の中から音色を選択します(トーン表参照)。選択したトーンの番号が画面に表示されます。
2. Tone-**10**またはTone+**11**を長押しすると素早く選択できます。
3. Tone-**10**とTone+**11**を同時に押すと、トーン000(ピアノ)に戻ります。

テンポ

1. Tempo-**12**またはTempo+**13**を押して、テンポを0～16レベルで調整します。初期設定のテンポは8レベルです。
2. Tempo-**12**またはTempo+**13**を長押しすると素早く調整できます。
3. Tempo-**12**またはTempo+**13**を同時に押すと、テンポは8レベルに戻ります。

トランスポーズ


1. Trans+**15**、Trans-**14**を押して移調します。-6～+6半音の範囲で設定可能。
2. Trans+**15**、Trans-**14**を長押しすると素早く調整できます。
3. Trans+**15**またはTrans-**14**を同時に長押しすると、レベル+0(初期設定の音程)に戻ります。

リズム

1. Rhy+**17**またはRhy-**16**を押して000～127の中からリズムパターンを選択します。
2. Rhy+**17**またはRhy-**16**を長押しすると、素早く選択できます。
3. Rhy+**17**またはRhy-**16**を同時に長押しすると、Rhy 0に戻り、Rhy 0を再生します。

スリープモード

本体を操作せず10分経つと自動的に電源がオフになります。もう一度演奏するときは  を押して再起動してください。

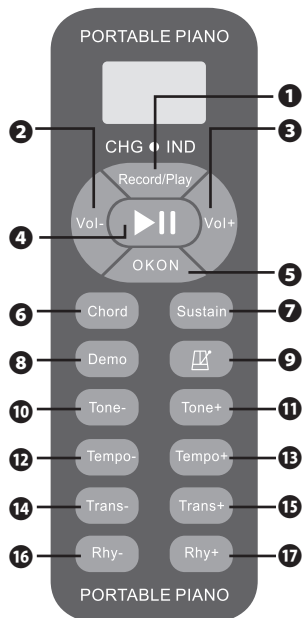

デモソング

0. Ballade pour Adeline	11. Milk Song
1. Song of Joy	12. A comme amour
2. Little Stars	13. Les premiers sourires de Vanessa
3. By Alice	14. Snowdreams
4. Dancing Girl	15. Bandari
5. Deskmate	16. Edelweiss
6. Ten Years	17. Dance of firefly
7. Colourful Clouds Chasing The Moon	18. My soul
8. In My Song	19. Croatian Rhapsody
9. CrystlLake	20. CSIKOS POST
10. Green Sleeves	

トーン表(音色一覧)

Piano	28. Electric Guitar (muted)
0. Piano 1	29. Overdriven Guitar
1. Piano 2	30. Distortion Guitar
2. Piano 3	31. Guitar Harmonics
3. Honky-Tonk Piano	Bass
4. Rhodes Piano	32. Acoustic Bass
5. Chorused Piano	33. Electric Bass(finger)
6. Harpsichord	34. Electric Bass(pick)
7. Clavinet	35. Fretless Bass
Percussion Instrument	36. Slap Bass 1
8. Celesta	37. Slap Bass 2
9. Glockenspiel	38. Synth Bass 1
10. Music Box	39. Synth Bass 2
11. Vibraphone	Strings
12. Marimba	40. Violin
13. Xylophone	41. Viola
14. Tubular Bells	42. Cello
15. Santur	43. Contrabass
Organ	44. Tremolo Strings
16. Hammond Organ	45. Pizzicato Strings
17. Percussive Organ	46. Orchestral Harp
18. Rock Organ	47. Timpani
19. Church Organ	Ensemble
20. Reed Organ	48. String Ensemble 1
21. Accordion	49. String Ensemble 2
22. Harmonica	50. SynthStrings 1
23. Bandoneon	51. SynthStrings 2
Guitar	52. Choir Aahs
24. Acoustic Guitar (nylon)	53. Voice Oohs
25. Acoustic Guitar(steel)	54. Synth Voice
26. Electric Guitar (jazz)	55. Orchestra Hit
27. Electric Guitar (clean)	Brass Instrument

56.Trumpet	92.Pad 5 (bowed)
57.Trombone	93.Pad 6 (metallic)
58.Tuba	94.Pad 7 (halo)
59.Muted Trumpet	95.Pad 8 (sweep)
60.French Horn	Fx
61.Brass Section	96.FX 1 (rain)
62.Synth Brass 1	97.FX 2 (soundtrack)
63.Synth Brass 2	98.FX 3 (crystal)
Reeds Instrument	99.FX 4 (atmosphere)
64.Soprano Sax	100.FX 5 (brightness)
65.Alto Sax	101.FX 6 (goblins)
66.Tenor Sax	102.FX 7 (echoes)
67.Baritone Sax	103.FX 8 (sci-fi)
68.Oboe	National Instrument
69.English Horn	104.Sitar
70.Bassoon	105.Banjo
71.Clarinet	106.Shamisen
Tongue	107.Koto
72.Piccolo	108.alimba
73.Flute	109.Bagpipe
74.Recorder	110.Fiddle
75.Pan Flute	111.Shanai
76.Bottle Blow	Percussion
77.Skakuhachi	112.Tinkle Bell
78.Whistle	113.Agogo
79.Ocarina	114.Steel Drums
Soft Leads	115.Woodblock
80.Lead 1 (square)	116.Taiko Drum
81.Lead 2 (sawtooth)	117.Melodic Tom
82.Lead 3 (calliope lead)	118.Synth Drum
83.Lead 4 (chiff lead)	119.Reverse Cymbal
84.Lead 5 (charang)	FxPhone
85.Lead 6 (voice)	120.Guitar Fret Noise
86.Lead 7 (fifths)	121.Breath Noise
87.Lead 8 (bass+lead)	122.Seashore
Synth Pad	123.Bird Tweet
88.Pad 1 (new age)	124.Telephone Ring
89.Pad 2 (warm)	125.Helicopter
90.Pad 3 (polysynth)	126.Applause
91.Pad 4 (choir)	127.Gun shot

リズム一覧

0.Beguines Wing	43.Rock_1	86.R.roll_2
1.Beguine_2	44.Rock_2	87.Fast Beat
2.Beguine_3	45.Rock_3	88.Quick Beat
3.Pop hit	46.Airy Rock	89.Smooth Beat
4.Pop	47.Heart Rock	90.Square Beat
5.Pop Malay	48.Rock & Roll	91.Euro Beat
6.Bossa nova	49.Urban Rock	92.Alpha Dance
7.Disco_1	50.Ballad	93.Beta Dance
8.Disco_2	51.Jazz Ballad	94.Dream Dance
9.Blue grass disco	52.C.Ballad	95.Dance_1
10.Waltzl_1	53.J.Ballad	96.Dance_2
11.Waltzl_2	54.60s Slow Ballad	97.Dance_3
12.True ballad waltz	55.Piano Ballad	98.RAP
13.Bossa Waltz	56.50s Ballad	99.The Country
14.Easy Waltz	57.Snake Base	100.Country Shuffle
15.Shuffle Waltz	58.Happy Blues	101.Electric Keys
16.Reggae Waltz	59.Old Blues	102.Dark Keys
17.Rumba Waltz	60.Blue Gras	103.Easy Walk
18.March_1	61.Boodie_1	104.Destiny
19.March_2	62.Boodie_2	105.Comedy
20.Rumba_1	63.Boodie_3	106.Drive
21.Rumba_2	64.Shuffle_1	107.Liquid Nova
22.Slow_1	65.Shuffle_2	108.Indonesian folk
23.Slow_2	66.Dream Shuffle	109.Absolute Music
24.Disco cha cha	67.Country Shuffle	110.Jamaica
25.Guala cha	68.Quick Shuffle	111.Synthesis
26.Char	69.Reggae Shuffle	112.Feel
27.Samba_1	70.R.&B	113.Accelerate
28.Samba_2	71.Reggae_1	114.Beach Night
29.Ubminimal	72.Reggae_2	115.Irish
30.8Bit_1	73.Reggae_3	116.Tarantella
31.8Bit_2	74.Salsa_1	117.Big band
32.16Bit_1	75.Salsa_2	118.Dan
33.16bit_2	76.Salsa_3	119.Fusion
34.Ballad_16T	77.Tecno_1	120.Horse
35.Country_16T	78.Tecno_2	121.Canon
36.Tango_1	79.Funky_1	122.Latin
37.Tango_2	80.Funky_2	123.Mambo
38.Polka_1	81.Dixie_1	124.New age
39.Polka_2	82.Dixie_2	125.Slow rc
40.Pop Swing	83.Foxtrot_1	126.Soul
41.Easy Swing	84.Foxtrot_2	127.Twist
42.Soft Swing	85.R.roll_1	