



18962-071-55 Keyboard Stand


A Setup: HIGH = lower Axxis

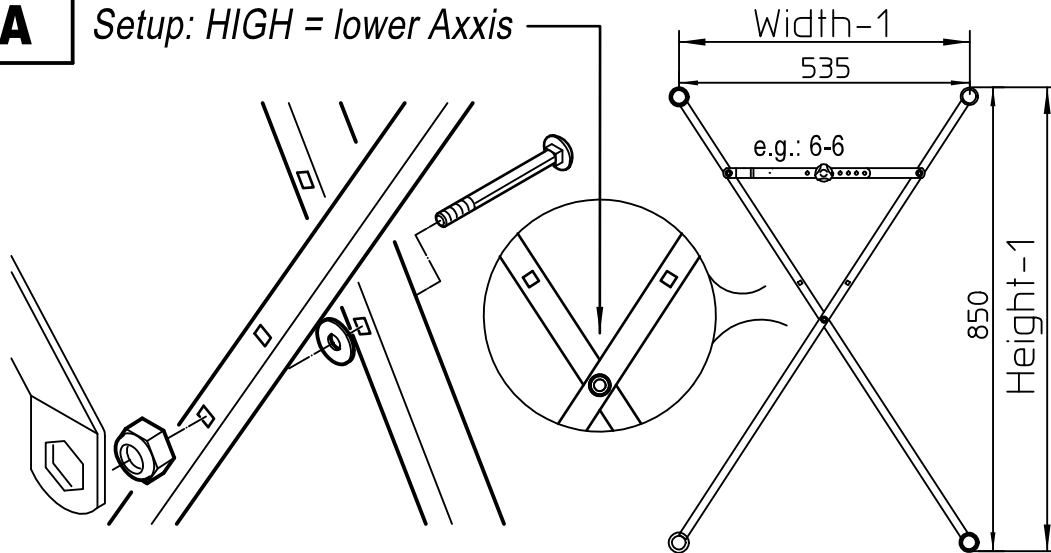

W-1	H-1	
760	+ 640	= 1-1
715	+ 695	= 2-2
670	+ 745	= 3-3
625	+ 785	= 4-4
580	+ 820	= 5-5
535	+ 850	= 6-6
490	+ 875	= 7-7
440	+ 905	= 8-8

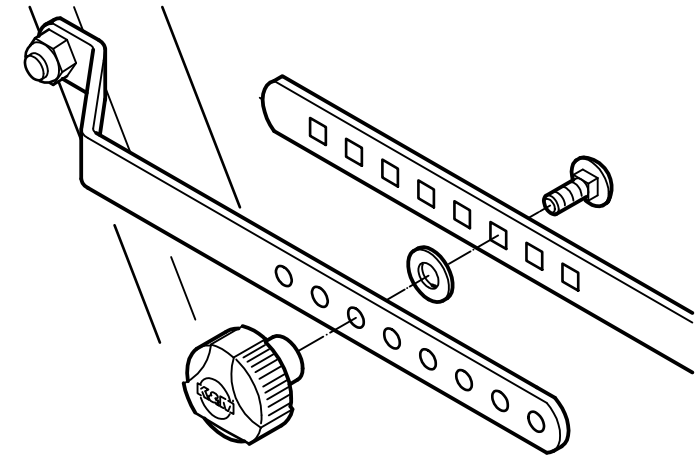

B Setup: LOW = upper Axxis

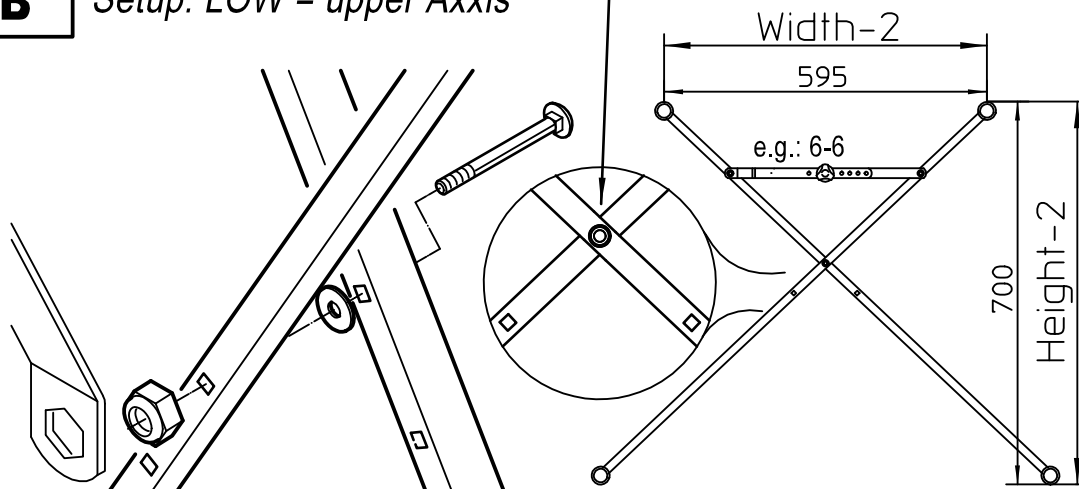

W-2	H-2	
-	-	= 1-1
800	+ 240	= 2-2
750	+ 420	= 3-3
700	+ 540	= 4-4
645	+ 625	= 5-5
595	+ 700	= 6-6
545	+ 760	= 7-7
490	+ 810	= 8-8

