


213 Speaker Stand

21300-009-55 black



pos.	description	art.-no.	qty.
1	bottom clamp	02-41-615-55	1
2	locking pin $\varnothing 6 \times 52$ mm	03-14-455-29	1
3	rubber leg cap $\varnothing 35$ mm	01-84-935-55	3
4	foot pipe	02-84-698-55	3
5	foot prop	01-16-580-55	6
6	plastic locking spacer R21	6-86735-1-55	1
7	locking knob M8 x 21/38 mm	01-82-783-55	1
8	clamp, loose	02-41-585-55	1
9	base tube	02-77-661-55	1
10	rivet $\varnothing 5 \times 53$ mm	03-61-804-29	6
11	clamp	01-84-015-55	3
12	guide bushing $\varnothing 42$ mm	01-86-530-55	1
13	rivet $\varnothing 5 \times 45$ mm	03-61-800-29	3
14	hand crank with extension rod cpl.	6-21300-5-55 = 21304-000-55	1
14.1	socket head screw M6 x 16 mm	03-02-210-25	1
14.2	half shell cpl., consisting of	7-213-001055	1
14.2.1	spring loaded locking boltwith straight pin	7-213-000400	1
14.2.2	lever	02-41-690-87	1
14.2.3	compression spring	03-15-140-00	1
14.2.4	half shell left	02-41-753-55	1
14.2.5	locking pin $\varnothing 3 \times 30$ mm	03-14-150-29	1
14.3	socket head screw M6 x 22 mm	03-02-225-25	3
14.4	socket head screw M6 x 40 mm	03-02-250-25	1
14.5	plastic locking spacer R18	6-86720-1-55	1
14.6	hexagon nut M8	03-08-430-29	1
14.7	locking knob M8 x 16/33 mm	01-82-763-55	1
14.8	extension rod cpl.	7-213-000555	1
14.8.1	extraction safety	01-85-775-55	1
14.8.2	extension rod w/M10	5-21300-1-55	1
14.9	hand crank cpl.	6-21300-8-55	1
14.9.1	hand crank	21303-000-55	1
14.9.2	knurled adjusting nut M14	01-06-450-25	1
14.9.3	washer 0,5 mm	03-11-810-29	2
14.9.4	rivet $\varnothing 4 \times 27$ mm	03-61-585-01	1
	-alternativ: screw + locking nut	-03-02-090-00 + 03-08-120-29	-1+1
14.9.5	driveshaft	4-21300-1-01	1
14.9.6	gum-o-ring	03-21-020-55	1
14.10	half shell right	02-41-752-55	1
14.11	locking nut, M8	03-08-330-29	5
14.12	finger guard	01-89-710-55	1
14.13	washer brass	03-11-500-29	2
14.14	drive wheel bronze	03-41-705-00	1
14.15	spindle	01-02-225-00	1
14.16	guide bushing $\varnothing 35$ mm	01-86-480-55	1

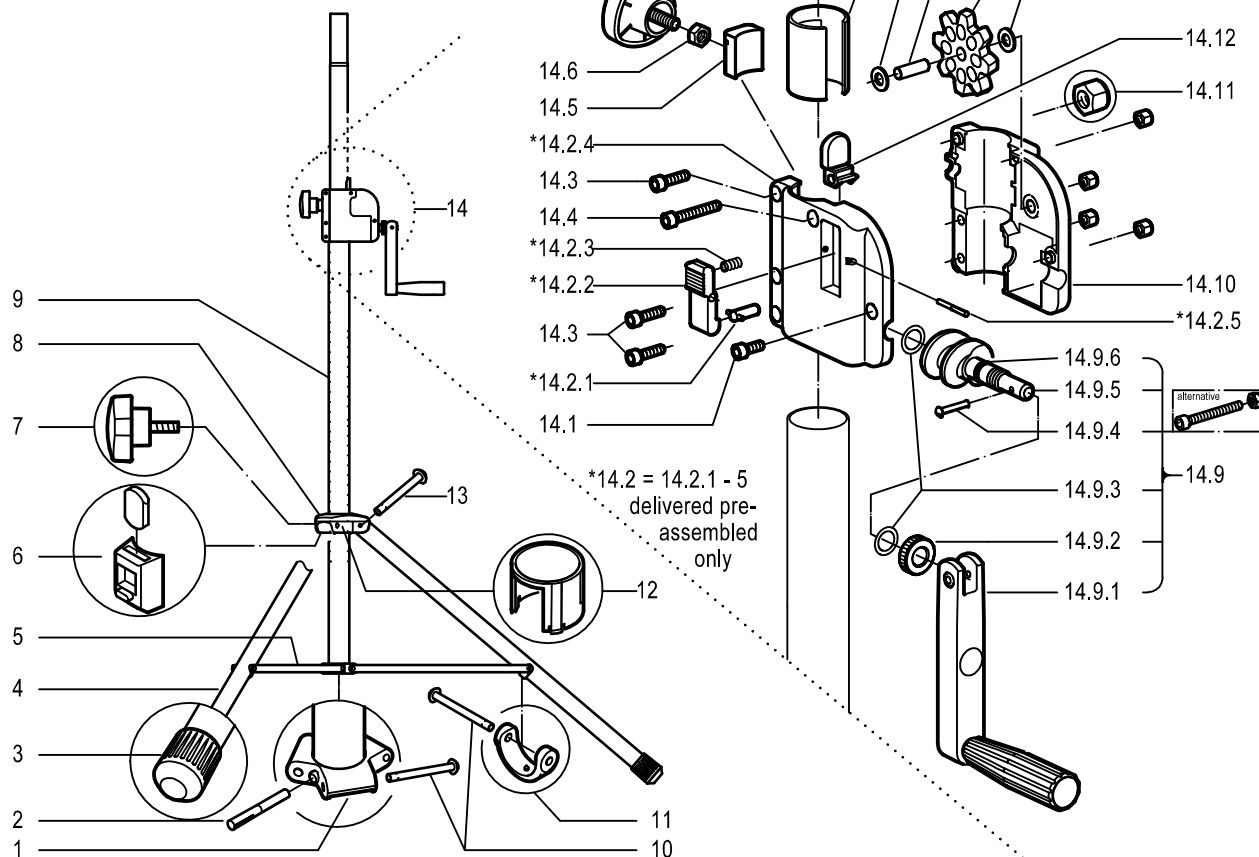

SPARE PARTS SPECIAL STANDS

SS
21300