


MKE 1 Accessory Kit

MZ 1

Instruction manual

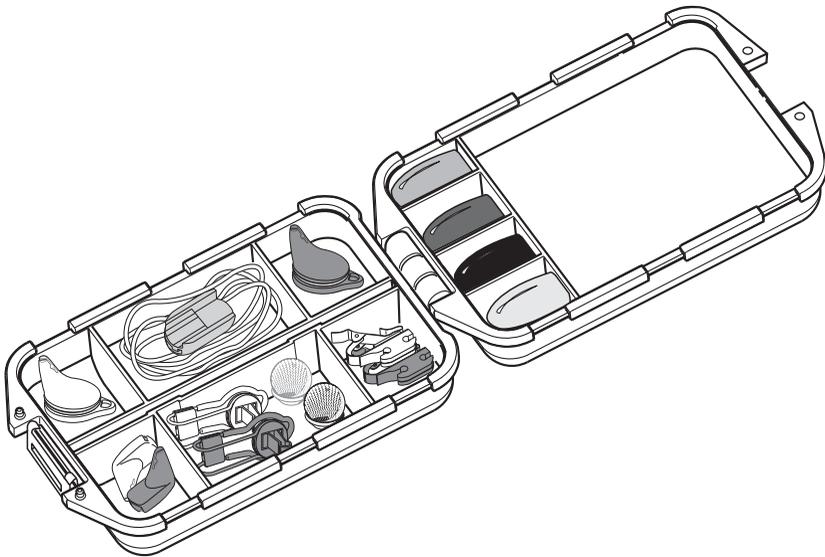

Sennheiser electronic GmbH & Co. KG
Am Labor 1, 30900 Wedemark, Germany

www.sennheiser.com

Printed in Germany

Publ. 08/09

535325/A01

MZ 1 Accessory Set for the MKE 1 Clip-on Microphone

The MZ 1 accessory set provides you with a wide range of ways to attach the MKE 1 clip-on microphone securely. The holders can be used in almost any situation in which the MKE 1 clip-on microphone can be worn, and they guarantee excellent sound quality.




For further information, please refer to the instruction manual for the MKE 1 clip-on microphone as well.

Delivery includes


Designation	Qty	Color	Order no.
MZK 1 accessory box	1	transparent	533667
MZQ 1 mini clip	2	black	533625
		white	533627
MZQ 10 mini clamp	2	black	512220
		white	533624
MZM 1 magnetic mount	2	black	533640
		white	533641
Band for magnetic mount	2	white	014744
MZV 1 cover-up	1	transparent	533631
MZW 01 windshield basket	2	black	521724
		beige	521726
MZW 02 foam windshield	4	black	536809
		beige	514524
		brown	524889
		white	524890
ZH 1 pin mount	2	black	533629
		white	533630

MZW 01 / MZW 02 Windshield

The MZW 01 windshield basket reduces wind noise by 22 dB. The MZW 02 foam windshield reduces wind noise by an additional 10 dB.

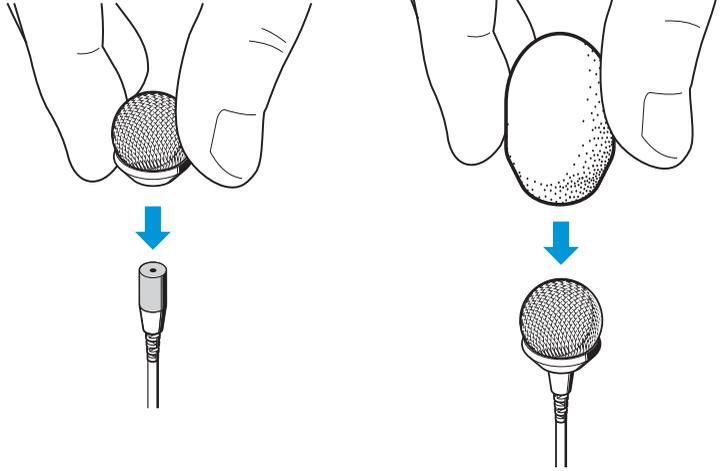

MZQ 1 Mini Clip

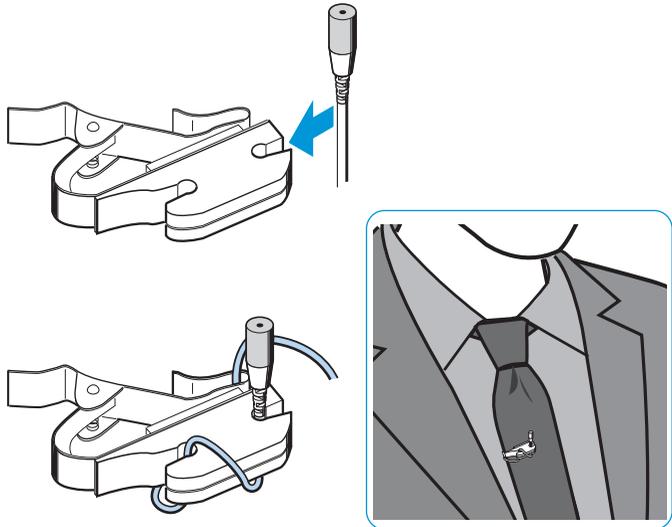




MZM 1 Magnetic Mount

DANGER! The magnetic mount generates magnetic fields that could interfere with cardiac pacemakers and implanted defibrillators.





- ▶ Keep the magnetic mount at least 1.2" (3 cm) from cardiac pacemakers and implanted defibrillators.

- ▶ Use the band provided to increase the magnetic mount's holding power, for example, if used with smooth fabrics.

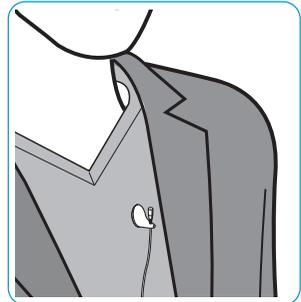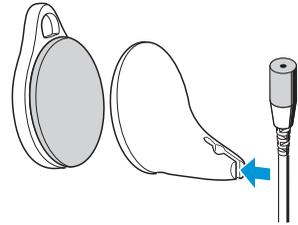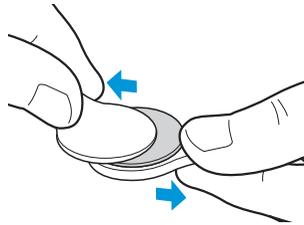


ZH 1 Pin Mount

WARNING! Be sure that the pin mounts do not cause injuries.

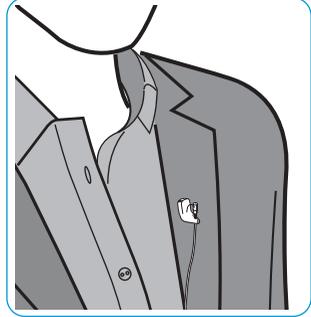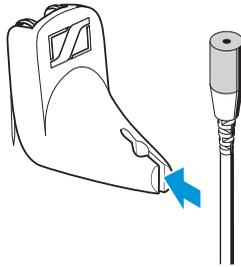

MZV 1 Cover-Up

- ▶ Attach the MZV 1 cover-up holder using moisture-resistant tape.

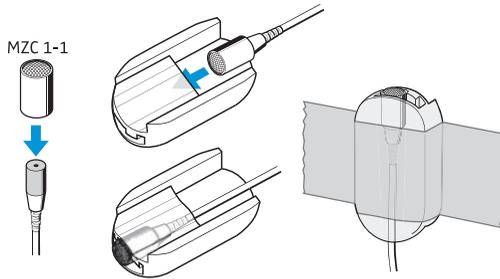

MZQ 10 Mini Clamp

